

# **QUICK COLOR MATCH**

# **\Easy**

# Screen-to-Print Color Matching Guide



# There are many ways to work with and enjoy printed photos.




Creating postcards using your favorite shots



Entering your work in photo competitions



Making a photo album to share with family and friends

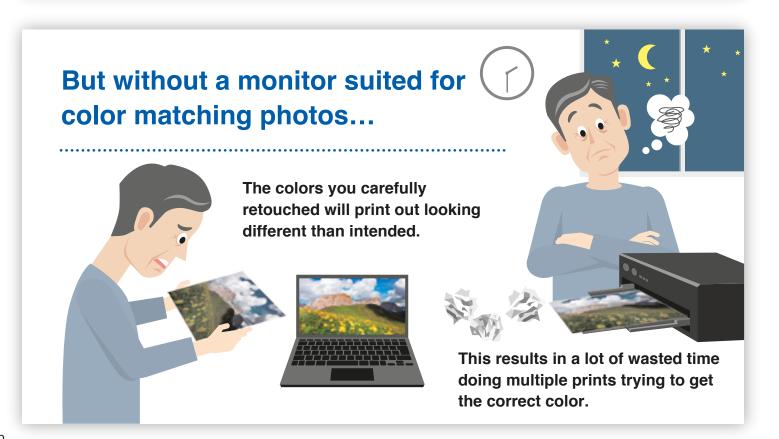

# Having an easy and reliable color matching system makes printing photos more enjoyable!

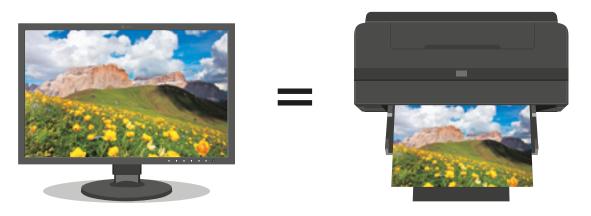


Photo shown on the monitor

Photo printed out on an inkjet printer

- **✓** Reduce the time and cost of making multiple prints
- **✓** Retouch your photos with confidence

This guide explains how you can achieve easy color matching for accurate prints with no hassle!



# **Steps to Achieve Color Matching**

#### **Monitor Adjustment**







Going through each setting is a hassle.



It is not only important to adjust the monitor, but also to select the correct settings for your retouching software and printer. With even one misstep, your photos may not print with the correct colors.

#### **Printer Settings**



#### **Environment Preparation**



We can consolidate these steps!

Introducing a unique software solution that automatically configures the monitor, retouching software, and printer settings for you.

**QUICK COLOR MATCH** 



See next page. ı



## **EIZO's Screen-to-Print Color Matching Software**

# QUICK COLOR MATCH



Quick Color Match is EIZO's own software solution that greatly simplifies the color matching process for photo enthusiasts and professionals alike. It was developed under a first-ever collaboration between EIZO and Adobe, Canon, and Epson.

Quick Color Match automatically adjusts to the ideal monitor, retouching software, and printer settings so you can focus on editing your photos and print your work quickly and hassle-free.



**Monitor Settings** 

Automatically adjusted!



**Retouching Software Settings** 



Printer Settings





**Color Management Monitor** 



8 - 9

PC Requirements, Printer, Printer Paper, Retouching Software



10 - 11

Lighting



11 - 12

Monitor Connection and Software Installation

**Printer Driver Installation** 

14 - 15

Print Plugin Software and Quick Color Match Installation

16 - 17

3 Easy Color Matching

**Using Quick Color Match** 



18 - 19



Now you can easily match your prints to your screen!



A suitable monitor is needed when matching the color of your prints to the screen.

# **Color Management Monitor**

Monitors Supported by Quick Color Match

**Recommeded Models!** 



ColorEdge CS2420



ColorEdge CS2730

CS230 CG247X CG2420 CG279X CG2730

# **Ample Screen Size for Creative Work**

The CS2420 can display two A4 pages plus tool palettes on its 24.1-inch screen. The CS2730 gives you even more room to work with its spacious 27-inch screen.

### **Monitor Features**

- 199% Adobe RGB Coverage Images shot in Adobe RGB or sRGB will be displayed correctly.
- 2 Smooth Gradations
- Uniform Brightness and Color

# **Choosing the Right Monitor**

#### Displays the Correct Color Space

It is important to select a monitor that correctly displays Adobe RGB and sRGB to reproduce colors faithfully.


#### 2 Displays Gradations Smoothly

In order to display solid colors and depth perception with high accuracy, a monitor that displays smooth gradations without banding is needed.

#### 3 Displays Uniform Brightness and Color

A monitor that has been adjusted in advance to correct uniformity errors is most appropriate to ensure brightness and color are even across the screen. It is also important that it counterbalances changing color temperature and brightness due to the passage of time.

■Results vary depending on model and environment.

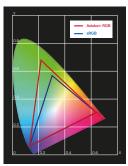





Gradation Scale without Adjustment



Gradation Scale After Adjustment





Without Uniformity Correction

With Uniformity Correction



# Confirm that your ColorEdge monitor is correctly connected to your PC.



Desktop PC





Notebook PC

Confirm the available output connections Example of a notebook PC's output terminals

#### appropriate outputs and check which cables come with your monitor. If your monitor's cables do not match your PC's available outputs, you may need to obtain additional cables.

# When using an all-in-one PC, confirm that you have the

#### Check the maximum resolution

Referring to your PC's user manual, choose a monitor with the appropriate resolution supported by the available outputs.



#### Types of PC outputs











# **PC Requirements**

Windows Windows 10 / 8.1 / 7

Mac macOS High Sierra (10.13) / macOS Sierra (10.12) /

OS X El Capitan (10.11) / Yosemite (10.10) / Mavericks (10.9)

#### **Printer**

#### Canon



## PIXMA PRO-10S

Gallery-quality A3+ photo printer with 10-ink system.

PIXMA PRO-10 PIXMA PRO-100 PIXMA PRO-100S imagePROGRAF PRO-1000

## **Epson**



**SC-P600** 

Professional A3+ printer with Epson UltraChrome HD ink technology for unsurpassed quality.

SC-P800 SC-P400

Stylus Photo R3000 Stylus Photo R2000

Printer availability varies by country. See printer manufacturer for details.

# **Retouching Software**



#### Other Supported Retouching Software

Canon

Adobe Photoshop Lightroom

Adobe Photoshop Elements

Canon Digital Photo Professional

Epson

Adobe Photoshop Lightroom

Adobe Photoshop Elements

Nikon ViewNX-i

When using the above retouching software, confirm colors on the print plugin window.

## **Printer Paper**

#### **Canon Paper**

Photo Paper Platinum
Photo Paper Plus Glossy
Photo Paper Pro Luster
Photo Paper Pro Premium Matte
Photo Paper Plus Semi-Gloss
Matte Photo Paper

#### **Epson Paper**

Velvet Fine Art Paper Ultra Smooth Fine Art Paper Premium Glossy Premium Semigloss Premium Luster Achival Matte Matte

#### **ILFORD Paper**

ILFORD Gold Fibre Silk
ILFORD Gold Fibre Gloss
ILFORD Smooth Cotton Rag
ILFORD Textured Cotton Rag
ILFORD Smooth Pearl
ILFORD Smooth Gloss

#### Pictorico Paper

Pro Hi-Gloss White Film Pro Hi-Gloss Photo Paper Pro Semi-Gloss Paper Pro Cotton Paper Pro Soft-Gloss Paper Pro Design Paper Plus GEKKO Blue

#### Hahnemühle Paper

FineArt Baryta
Photo Rag Baryta
Photo Rag (188, 308, 500, Duo)
Photo Rag Bright White
Photo Rag Ultra Smooth
German Etching
Hahnemühle Photo Luster
Hahnemühle Photo Matt Fibre

#### **SIHL Paper**

Metallic Pearl High Gloss Photo Paper 290 High Gloss Photo Paper 330 Lustre Photo Paper 300 Lustre Duo Photo Paper 330 Satin Baryta Paper 295 Smooth Matt Cotton Paper 320 Textured Matt Cotton Paper 320

#### **Tecco Paper**

PHOTO PM230 Matt
PHOTO PL285 Luster
PHOTO PUW285 Ultra White
PHOTO PFR220 DUO Fine Art Rag
PHOTO GB330 Galleryboard
PHOTO BT270 Baryt
PHOTO BMT275 Baryt Matt

- Papers supported by Quick Color Match vary depending on the printer model.
  To see which papers are supported by your printer, visit: www.eizoglobal.com/i/qcm-paper/
- See the Quick Color Match user's manual for how to add additional papers: www.eizoglobal.com/i/qcm-manual/




# Why a printer that supports color management is important

#### It can faithfully print Adobe RGB or sRGB images.

Adobe RGB is a wide color space that captures more vivid colors in images. If you use a conventional printer with a narrow color space, some of the brilliant blues and greens in your photos will be lost in the printing process. By using a high-quality printer, color reproduction is greatly improved so you can achieve prints that match your screen.

#### **Consistent Color After Printing**

Using a color printer with quickly drying ink ensures that colors are consistent. This makes it easier to check your work right after printing.

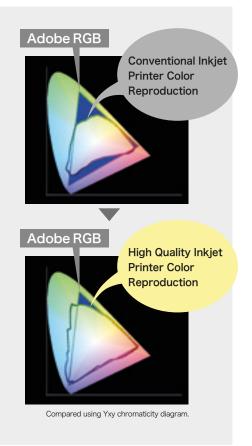


In order to check that your photos are printed with the correct colors, you need to view the prints under a light source with a 5,000 K color temperature.

# Lighting





Printed photos reflect the light around them and travel to the human eye where they are recognized as an image.

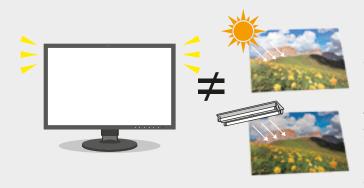

Due to this, when viewing objects in outside light during the day and indoor lighting in the evening, the color of the light changes.

Monitors emit light from their backlights so even if the ambient lighting conditions change, the colors you see on the screen will have little variance. This is why comparing your photo prints to the screen under varying ambient lighting conditions may cause the colors to look different.

# **Choosing Appropriate Lighting**

The appropriate viewing environment can be achieved by using a color temperature that is close to "sunlight" (5,000 K). This value is based on the human sense of color.



Bulbs that meet the color temperature standard of 5,000 K can be found through general electronic retailers. Below is EIZO's recommendation.

#### N-EDL... AAA Day white color rendering (Ra: 90-99)\*

\*Color rendering index (Ra) refers to a quantitative measure of the ability for a fluorescent light to reproduce the colors we see in natural light.

# Prevent Glare with a Light-Shielding Hood

When comparing prints to your screen, glare on the monitor due to ambient lighting can cause colors to appear differently.

If you use a light-shielding monitor hood, you can prevent glare and reflections on the screen to carry out color matching more accurately.








# **Software Installation**

# Connecting the Monitor

While referring to your monitor's setup guide, follow these steps.

- ① Connect your ColorEdge monitor to your computer using the signal cable.
- 2 Connect your ColorEdge monitor and the computer to the power using the power cables.
- 3 Connect your ColorEdge monitor to the computer using the USB cable.

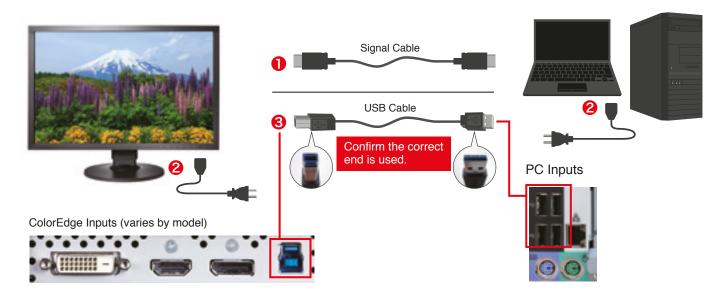

## 2 Printer Driver Installation

#### **For Windows**

Insert the utility disc that came with your printer or download the appropriate drivers from the manufacturer's website.

Double click on the DVD drive or installation file you downloaded.





#### For Mac


Download the appropriate drivers for your printer from the manufacturer's website.

Double click the installation file you downloaded.




Follow the instructions on your screen to carry out installation.

#### **For Canon Printers**

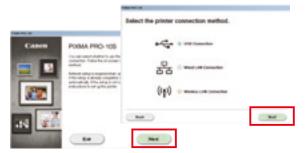

When the installation window appears, click **Next**. Select how you will connect to the printer (Network or USB) and click **Next** again.

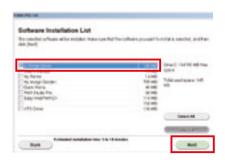

From the list, check IJ Printer Driver and click **Next**.



Continue to click **OK** and **Next** until you reach the end of the installation process.



When the installation is complete, click Exit.

## **For Epson Printers**



When the installation window appears, click Start & Connection.



Check the box to agree to the terms of the license and click **Next**.



Select First time setup and click Next and OK.



Select how you will connect to the printer (Wifi, Ethernet, or USB) and click **Next.** When the installation is complete, click **Finish**.

# **Software Installation**


# 3 Print Plugin Installation

#### **For Canon Printers**


Canon Print Studio Pro Ver. 2.2.0



Double click the print plugin installation file to begin.

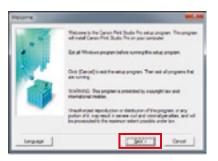

Proceed with the installation by clicking Next and Yes.

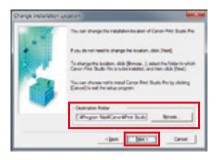

Confirm the installation location and click on **Next** and **Yes**.



Click Complete to finish the installation.

## **For Epson Printers**


Epson Print Layout Ver. 1.3.5



Double click the print plugin installation file to begin.



Proceed with the installation by clicking Next.

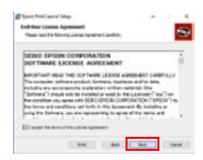

Check the box to agree to the terms of the license and click **Next** 




Click **Finish** to complete the installation.


# **4** Quick Color Match Installation Guide


Download Quick Color Match for free by visiting: www.eizoglobal.com/i/download/qcm


#### **For Windows**



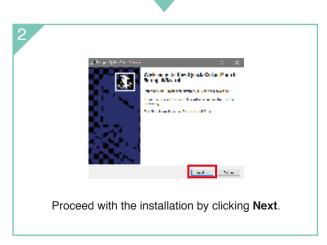

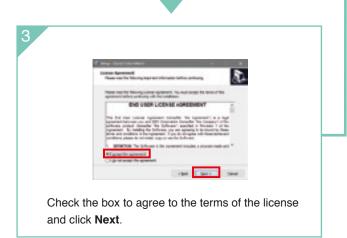

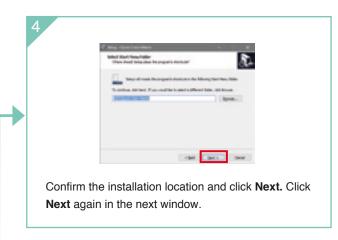

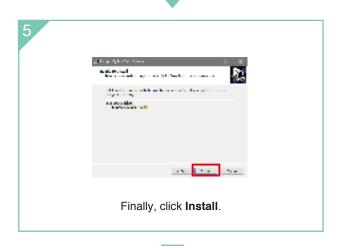




# **Using Quick Color Match**

This guide explains how to use Quick Color Match software with Photoshop CC / CS6.


#### For Windows

Double click the Quick Color Match icon on your desktop.

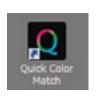

The Quick Color Match menu will appear. Confirm that the printer you will use is selected.



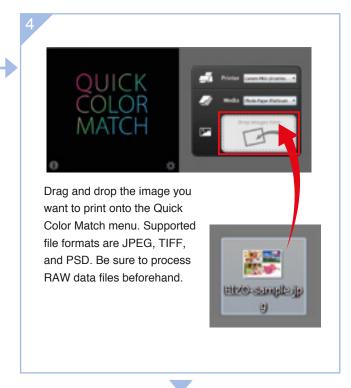

Settings in Photoshop will automatically be adjusted to the ideal settings and the color matched image will be displayed on your screen.



If you need to further edit your photo, continue to retouch in the Photoshop window.

See the Quick Color Match user's manual for using other software applications. www.eizoglobal.com/i/qcm-manual/




Quick Color Match saves adjustment results under your ColorEdge monitor's Custom preset. This setting will display the correct colors on your screen so do not change modes.



To print, click on the button with the name of your print plugin software in the lower right corner of the Quick Color Match window.

#### **For Canon Printers**


#### **Using Print Studio Pro Plugin**

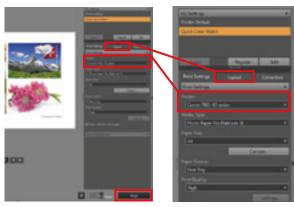

Choose the paper size and layout, then click Print.

## **For Epson Printers**

#### **Using Epson Print Layout Plugin**

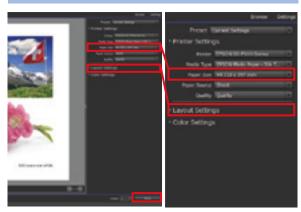

Choose the paper size and layout, then click Print.

#### \ Quick Point! /

Quick Color Match automatically adjusts the printer to the ideal color settings so you do not need to make any changes. Now you can print your photo without worrying about navigating through several windows of technical settings and options.



# Great

Confirm that your photo matches your screen by viewing it under a 5000 K light source. Now enjoy printing even more photos with confidence!





# Further increase your matching precision

ColorNavigator 7 is EIZO's own color management software for producing predictable color results. It allows you to carry out calibration with your ColorEdge monitor's built-in sensor or the optional EX3 external sensor and manage advanced user-desired target values for further improving color matching.

## ColorNavigator 7





Calibration Sensor EX3

#### **EIZ** Corporation

153 Shimokashiwano, Hakusan, Ishikawa 924-8566 Japan Phone +81-76-277-6794 Fax +81-76-277-6793

Copyright © 2018 EIZO Corporation. All rights reserved. (180705)

Specifications are subject to change without notice.

screenshots reprinted with permission from Adobe Systems Incorporated.

All product names are trademarks or registered trademarks of their respective companies. ColorEdge and EIZO are registered trademarks of EIZO Corporation. Adobe product